



SITewardEN ALARMS

OPERATING INSTRUCTIONS



**FIRECHIEF SITEWARDEN
SE CALL POINT ALARM**
116-1141



**FIRECHIEF SITEWARDEN
SE PUSH BUTTON ALARM**
116-1142

FIRECHIEF®

SITewardEN ALARMS

FIRECHIEF SITewardEN SE CALL POINT ALARM (116-1141)
& FIRECHIEF SITewardEN SE PUSH BUTTON ALARM (116-1142)

REMOVE THE COVER: Unscrew 2 fixings, 1 located on each side of the alarm. Then unhook the front cover from the mounting plate, taking care not to damage any wires connecting the cover to the mounting plate.

INSTALL 8NO. BATTERIES: We recommend quality AA battery cells. Unclip the battery pack, and install 8no AA cells, 4 per side. Re-fit the pack into its holder.


THE RECOMMENDED MOUNTING HEIGHT of the alarm is approximately 1.3m above Ground Level, to allow for easy activation.

OPERATING AND RESETTING THE CALL POINT ALARM: Press the glass on the call point. To reset, insert the red reset key provided, and twist to return the glass to standby position.

OPERATING AND RESETTING THE PUSH BUTTON ALARM: Press the large red button to operate. To reset, twist the button in the direction of the arrow until the button returns to the standby position.

SERVICING: Test the alarm once per month. Replace the batteries at least annually.

WIRING DIAGRAM FOR ALARM INTECONNECTION

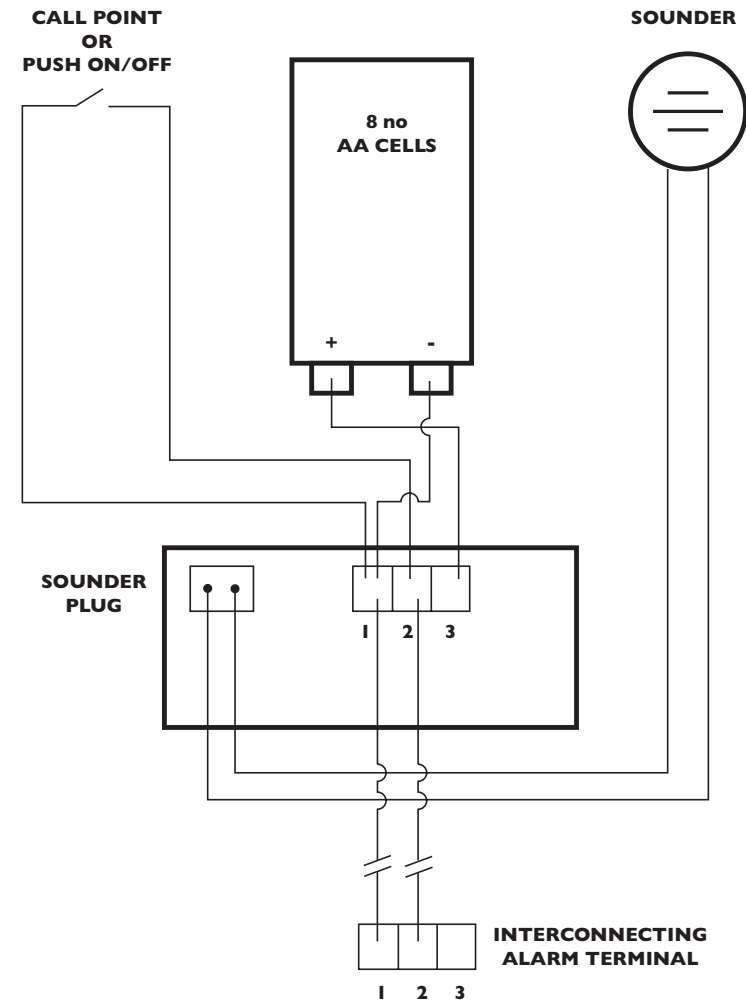

You will need 2-Core bell-wire or similar cable for interconnecting